


To Change or View Operator Display Settings:

- ◆ Press the Setup button to display the Setup screen.

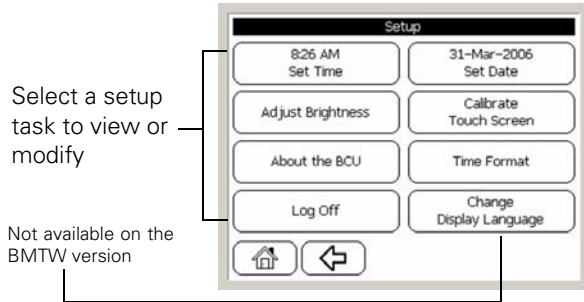

CAUTION

AVOID EQUIPMENT DAMAGE!

When calibrating the touch screen, do not allow it to come into contact with sharp objects.

To Clean the Touch Screen:

To clean the touch screen, wipe it off with a non-abrasive cloth. For more aggressive cleaning, use a non-abrasive cloth with a mild, ammonia-free glass cleaning solution.

CAUTION

AVOID EQUIPMENT DAMAGE!

Take care not to let any liquid run down into the BCU. Any liquid coming in contact with the BCU circuit board could cause the touch screen or the BCU to malfunction.




Trane
A business of American Standard Companies
www.trane.com








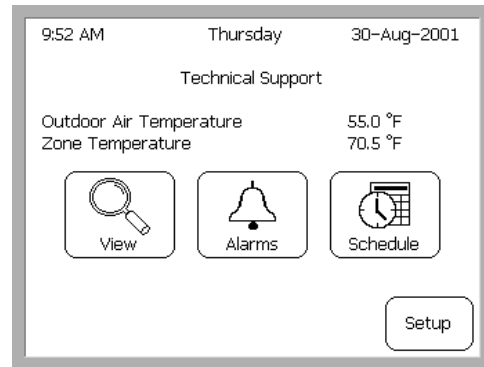


For more information, contact your local Trane office or e-mail us at comfort@trane.com

| | |
|-------------------------|--------------------------------|
| Literature Order Number | BMTW-SVX02B-EN |
| File Number | SL-ES-BAS-BMTW-SVX-02B-EN-0706 |
| Supersedes | BMTW-SVX02A-EN |
| Stocking Location | Inland |

 Trane has a policy of continuous product and product data improvement and reserves the right to change design and specifications without notice. Only qualified technicians should perform the installation and servicing of equipment referred to in this publication.




All operator display tasks begin at the home screen.

| Button | Description |
|--|--|
|  | Press the View button to: <ul style="list-style-type: none"> • View and change setpoints • Perform equipment overrides • View diagnostics |
|  | Press the Alarms button to: <ul style="list-style-type: none"> • View alarms and events • Acknowledge and delete alarms |
|  | Press the Schedule button to: <ul style="list-style-type: none"> • View schedules • Change schedules (start times and stop times) • Create and delete exceptions |
|  | Press the Setup button to: <ul style="list-style-type: none"> • Change system time or date • Adjust screen brightness • Calibrate the operator display screen • Manually log off • Change the operator display language |
|  | The Home button returns the display to the home screen. |
|  | The Back button returns the display to the previous screen. |
|  | The Top of List button shows items at the top of the current list. |
|  | The Bottom of List button displays items at the bottom of the current list. |
|  | The Up button shows the items in the list above the items shown on the screen. |
|  | The Down button shows the items in the list below the items shown on the screen. |


To View or Change System Status:

1. Press the View button to display the View Equipment screen.


2. Select a sort method to display a sort screen.

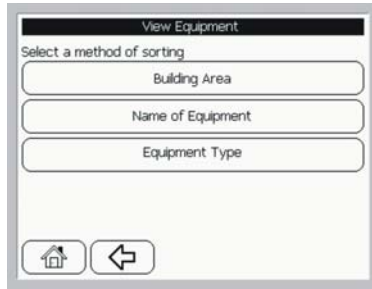


3. Select equipment or room to view. The main UCM screen displays.

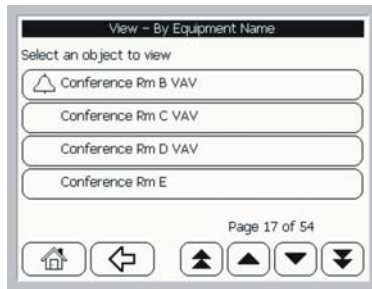

View operating conditions of the equipment

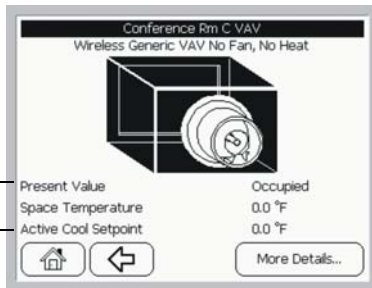

4. Press the More Details button to change operating conditions of the equipment.

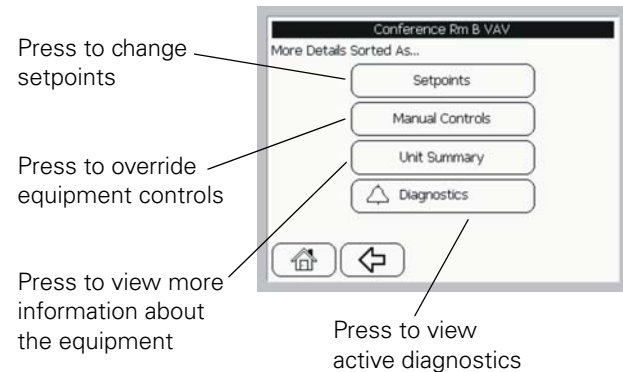

Press to change setpoints

Press to override equipment controls


Press to view more information about the equipment

Press to view active diagnostics


To View or Change Schedules:

1. Press the Schedule button to display the Schedule Main Menu screen.

2. Select a schedule name to display the calendar screen.

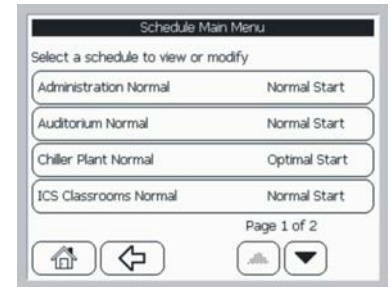


3. Select a day to view its schedule. The basic or detailed event screen displays.

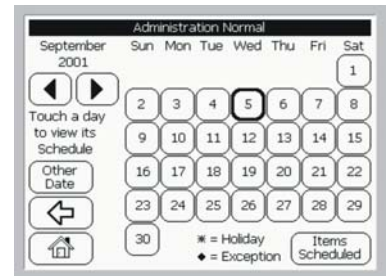

Press these buttons to change event times.

Press More Details to view more details about the schedule.

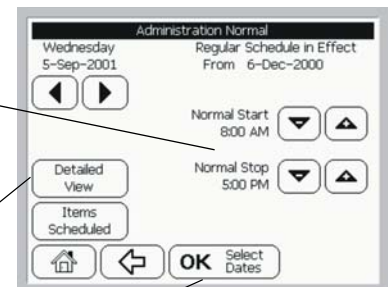

Press OK Select Dates to apply changes to the schedule.

To View Alarms and Events:

- ◆ Press the Alarms button to display the event log screen.

View the list of alarms and events

Press a button to view an alarm or event

